

Warning:

- Caution Risk of Shock. This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.
- · Make sure all electrical power is turned off while installing the fixture.
- This luminaire must be adequately grounded for protection against shock hazards and to assure proper operation.
- · Disconnect power before servicing.
- · Always use correct lamp type and wattages.

FOR USE WITH:

- VOLA
- AIRVOLA
- VOL
- FLT
- GH

- LEDs are ESD (Electro Static Discharge) sensitive devices that can be easily damaged if the proper ESD mitigating steps are not taken.
- LEDs are very sensitive to mechanical damage. Caution must be taken to avoid damage to the LEDs.
- ESD or mechanical damage voids all warranties.

What is a NEMA "G" (Grid) fixture? All Industrial Lighting Products fixtures are designed to fit securely into a standard NEMA Type "G", 1" nominal T-bar system. Consult the factory for use with other grid systems.



- **STEP 1:** Follow the steps below to install the fixture(s) into a NEMA Type "G" ceiling system:
 - a. Raise the fixture through the ceiling opening and rest the fixture in the grid system.
 - **b.** Center the fixture within the opening.
 - c. (Optional or as required by local building code) Use hurricane clips (sold separately) to secure the fixture to the ceiling structure for added stability.
 - **d.** Refer to local codes for other installation requirements.
- **STEP 2:** Once the fixture is installed into the ceiling system, follow the steps below to complete necessary electrical connections:
 - a. Remove access plate on the back of the fixture.
 - b. Remove ballast supply wires from access plate.
 - c. Make wire connections in accordance with local codes. A ground wire or screw location is provided depending on the fixture model.
 - d. Re-install access plate.

STEP 3: Attach power supply and ground wires using UL listed wire connectors.



Please consult factory for other driver configurations or emergency driver wiring diagrams.

Note: Refer to individual product specification sheets for further information.