


AL-ARM6-S Installation Instructions

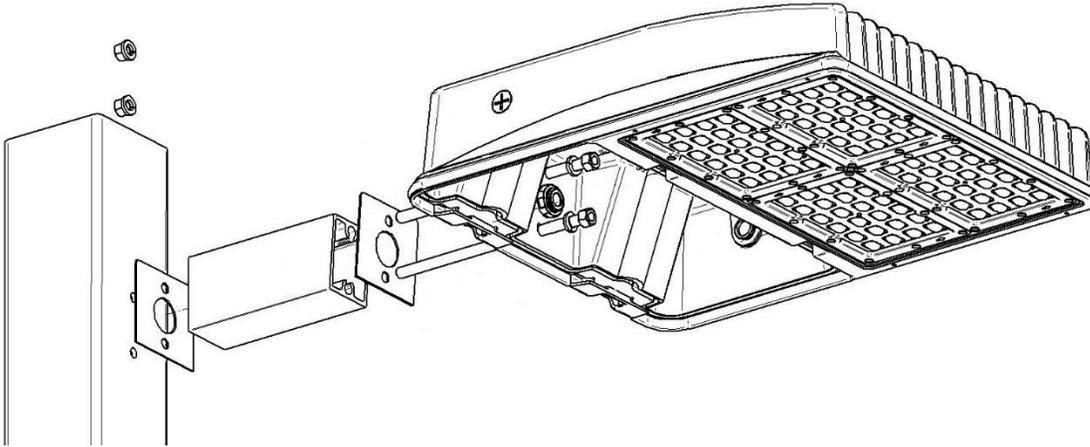

1. Remove security screws (if installed) and open latches to access the fixture driver compartment.
2. Insert the first threaded rod through the top hole in the back of the fixture. Slide a lock washer and nut onto the end of the rod inside the fixture housing. Thread the nut onto the rod until about $\frac{1}{4}$ " of the threaded rod is sticking out beyond the nut.
3. Insert the second threaded rod through the bottom hole in the back of the fixture. Slide a lock washer and nut onto the end of the rod inside the fixture housing. Thread the nut onto the rod until about $\frac{1}{4}$ " of the threaded rod is sticking out beyond the nut.
4. Remove the pole top cap.
5. Insert the threaded rods from steps 2 and 3 through the first piece of gasket, through the upper and lower holes in the arm, and through the second piece of gasket. Make sure the angled edge of the arm matches the angle at the back of the fixture, so the assembly will be level when installation is complete. The long side of the arm should be at the top of the fixture.
6. Route wiring through the center of the arm into the center opening of the pole.
7. Insert the exposed ends of the threaded rods into the pole. From inside the pole, slide a lock washer and a nut onto each rod and tighten until the nuts are at least fully threaded onto both rods.
8. Tighten both nuts within the fixture until the assembly is held together, but can still be adjust. Make sure fixture is mounted level before tightening the nuts further.
9. Tighten both nuts within the fixture to 18 ft-lbs.
10. Complete all supply wiring within the driver compartment.
11. Close the driver cover and secure with the two latches. Reinstall security screws (if provided).