




INSTALLATION INSTRUCTIONS

EXC1 Series Combo Exit/Emergency

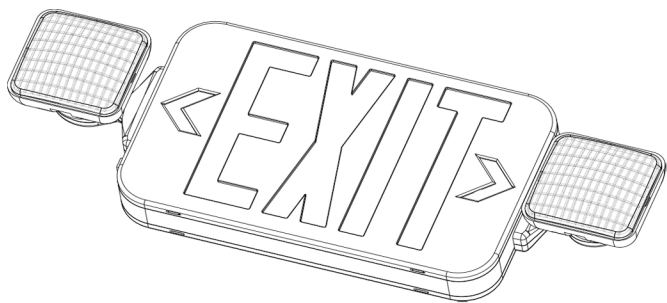

MODEL NUMBERS

EXC1-U-2RWS	EXC1-U-2GWS
EXC1-U-2RWH	EXC1-U-2GWH
EXC1-U-2RWH-RC	EXC1-U-2GWH-RC
EXC1-U-2RWH-SD	EXC1-U-2GWH-SD
EXC1-U-2RWH-RC-SD	EXC1-U-2GWH-RC-SD

IMPORTANT SAFEGUARDS:

- 1) READ AND FOLLOW ALL SAFETY INSTRUCTIONS
- 2) Do not use outdoors.
- 3) Do not mount near gas or electric heater.
- 4) Use caution when handling batteries. Avoid possible shorting.
- 5) Equipment should be mounted at heights(Max:9ft) to prevent tampering by unauthorized personnel.
- 6) The use of accessory equipment is not recommended by the manufacturer, this may cause unsafe conditions.
- 7) Do not use this equipment for other than the intended use.
- 8) Save these instructions.

IMPORTANT:

When relamping, only use lamps specified in the exit sign.

Using other lamp types may result in transformer damage or unsafe conditions.

Battery in this unit may not be fully charged.

After electricity is hooked up to unit, let the battery charge up for at least 24 hours.

Then normal operation of this unit should take effect.

Installation Instructions:

Ceiling Mounting

- 1) Connect 20" jumper leads to A.C. input leads in J-box, fasten J-box bracket to J-box. Use Black wire for 120 volt, Red wire for 277 volt, White wire is common.
- 2) Fasten canopy to J-box bracket.
- 3) Snap housing to canopy.
- 4) Connect and trim input leads to socket leads at upper left corner of housing wire channel.
- 5) Secure face plate to housing. Remove the proper arrow as required.

Back Mounting

- 1) Connect 20" jumper leads to A.C. input leads in J-box. Use Black wire for 120 volt, Red wire for 277 volt, White wire is common.
- 2) Remove necessary knockouts and fasten back cover to J-box.
- 3) Snap housing to back cover.
- 4) Connect and trim input leads to socket leads at upper left corner of housing wire channel.
- 5) Secure face plate to housing.



INSTALLATION INSTRUCTIONS


EXC1 Series Combo Exit/Emergency

WARNING:

Unused wires must be capped using enclosed wire nuts.

Wiring diagram for Models

- EXC1-U-2RWS
- EXC1-U-2RWH
- EXC1-U-2GWS
- EXC1-U-2GWH

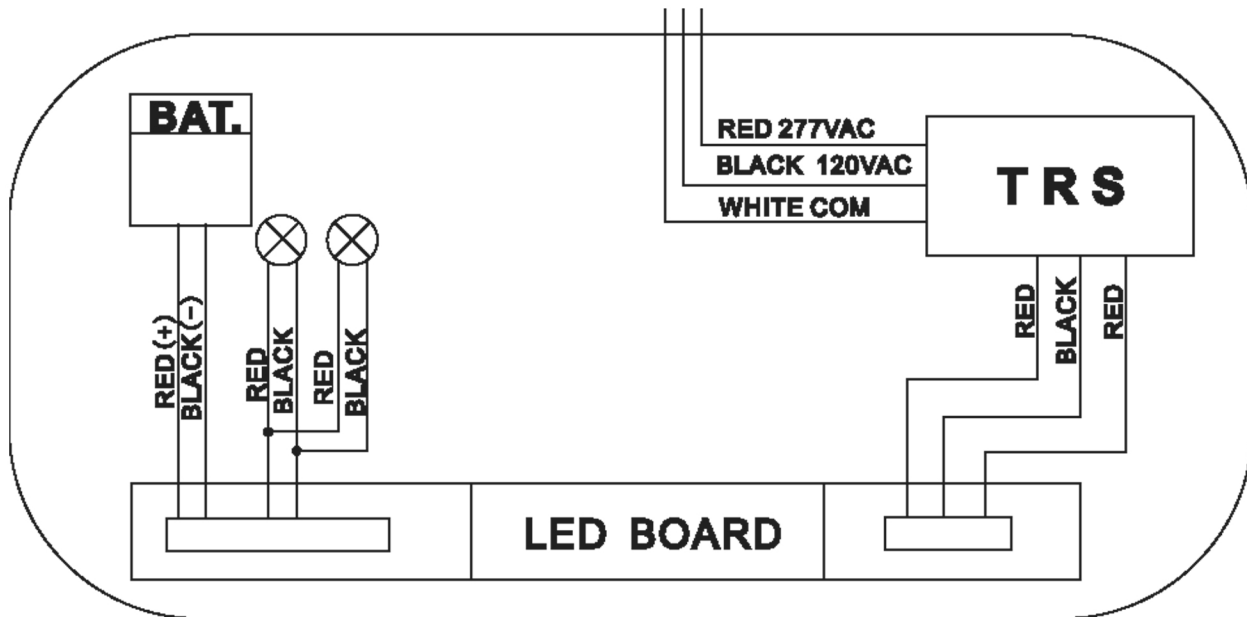

Wiring diagrams for -RC Models

- EXC1-U-2RWH-RC
- EXC1-U-2GWH-RC

