




1. Install the small piece of the Universal Pole Mount Bracket oriented as Shown using the provided hardware. Gasket must be placed between the UPMB and the casting to preserve IP rating. Tighten nuts to 12 ft-lbs.

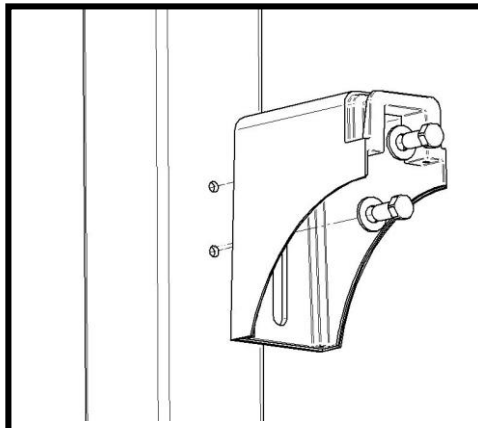


2. Install the large piece of the Universal Pole Mount Bracket to the pole using existing holes. The mounting holes and slots in the UPMB are designed for 1/2" hardware (provided by others).

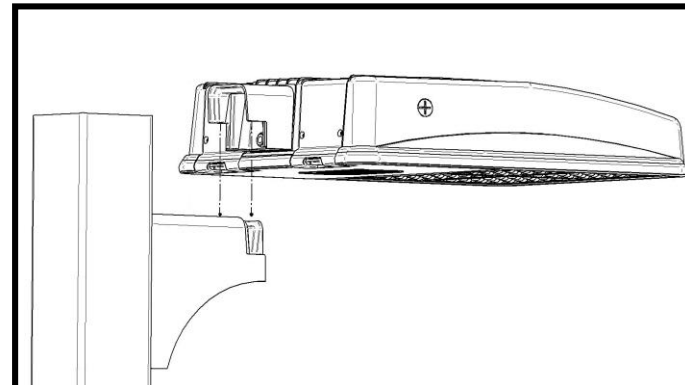

3. Slide fixture with small piece attached over the large piece, so that the cutout on the small piece aligns with the large piece. The top surfaces of both pieces should be nearly flush.

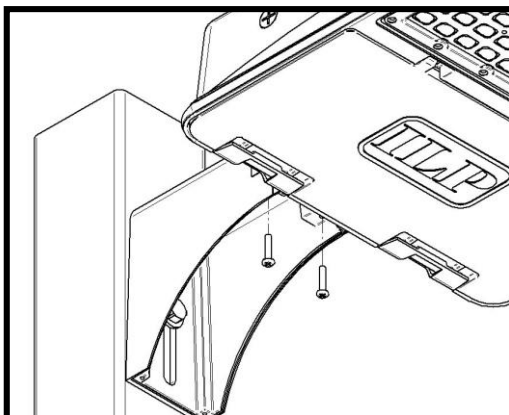

4. Secure the two halves of the UPMB using the provided #10-32 screws.

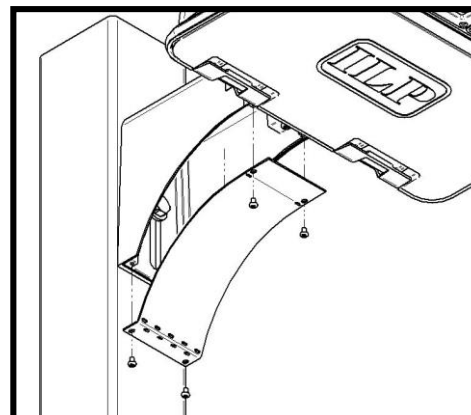

5. Complete all wiring. Install cover for UPMB using the provided #8-32 screws.