


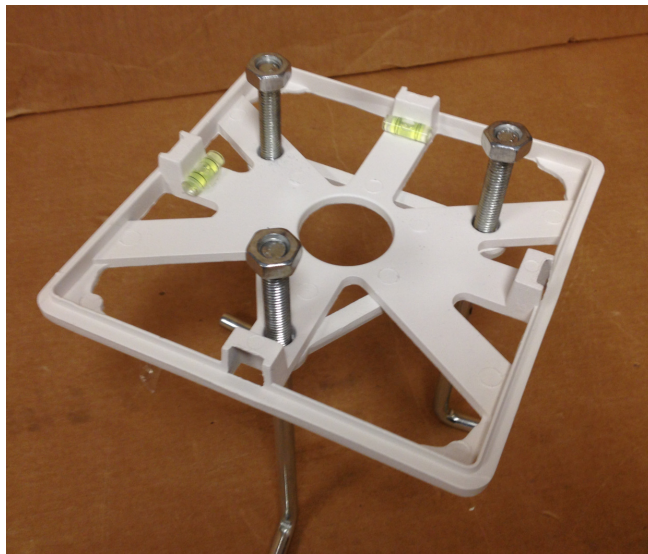

**These are the (3) mounting bolts and template that will be used to position the bolts in the concrete pad.**

**Wiring will need to be provided by a qualified electrician.**



**This is the bottom base plate of the Bollard. Loosen the (4) set screws from the bottom of the Bollard and remove. Place over mounting bolts and tighten nuts. Position Bollard housing over mounting plate and retighten set screws.**

