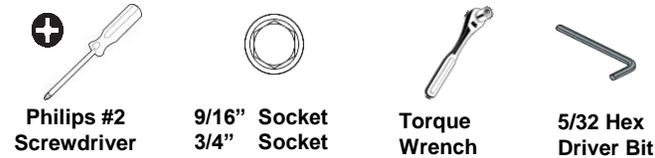**Industrial Lighting Products**

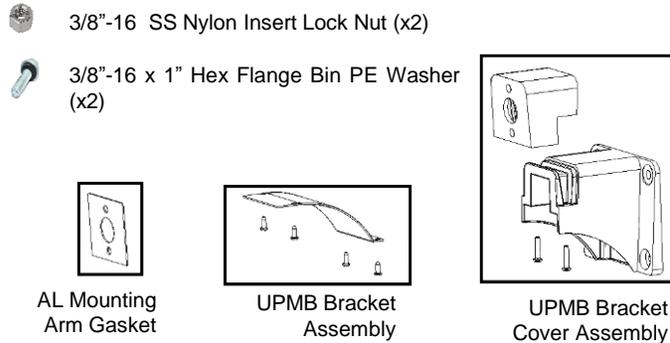# Area Light -
WMB Install Instructions

AL-WMB Mounting hardware for use with ILP outdoor fixtures of 2 LED Boards & 4 LED Boards Housing: **AL-70W, AL100W, AL140W** and **AL-180W.**

1. Install the Mounting Arm oriented as shown using the provided hardware. Gasket must be placed between the Mounting Arm and the casting to preserve IP rating. Tighten hardware to 12 ft-lbs.

2. Install the Mounting Bracket using existing holes. The mounting holes and slots in the Mounting Bracket are designed for 5/16" hardware (supplied by other). Tighten hardware to 12 ft-lbs.

3. Slide fixture with the Mounting Arm attached down on to the Mounting Bracket , so that the cutout on the Mounting Arm aligns with the Mounting Bracket. The top surfaces of both pieces should be nearly flush.

4. Secure the two halves of the Mounting Bracket fully seating the #10-24 socket head cap screw torqued to 50 ft-lbs.

5. Complete all wiring according to local and federal standards/regulations . Install cover for Mounting Bracket using the provided #8-32 screws.

WMB

WARNINGS

⚠️ **WARNING** – RISK OF FIRE OR ELECTRIC SHOCK. INSTALLATION REQUIRES KNOWLEDGE OF LUMINAIRES ELECTRICAL SYSTEMS. IF NOT QUALIFIED, DO NOT ATTEMPT INSTALLATION. CONTACT A QUALIFIED ELECTRICIAN.

⚠️ **WARNING** – RISK OF FIRE OR ELECTRIC SHOCK. BE CERTAIN ELECTRICAL POWER IS OFF BEFORE AND DURING INSTALLATION OR MAINTENANCE.

⚠️ **WARNING** – RISK OF FIRE OR ELECTRIC SHOCK. LUMINAIRE MUST BE CONNECTED TO A WIRING SYSTEM WITH EQUIPMENT-GROUNDING CONNECTOR.

⚠️ **WARNING** – RISK OF PERSONAL INJURY DUE TO IMPROPERLY INSTALLED FIXTURE. INSTALL THE LUMINAIRE WITH RECOMMENDED TOOLS AND USE ONLY MATERIAL AND/OR PARTS PROVIDED. WARNING:
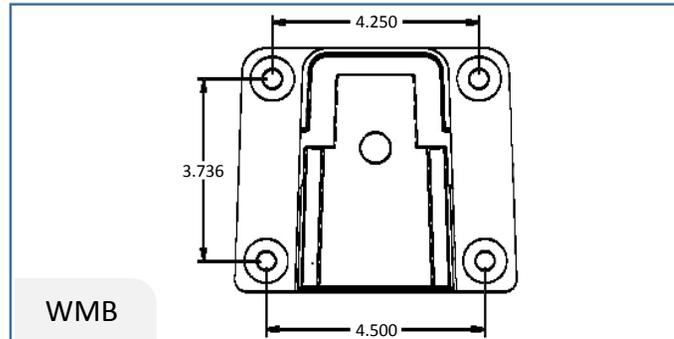
Tools required:

| Philips #2 Screwdriver | 9/16" 3/4" Socket Socket | Torque Wrench | 5/32 Hex Driver Bit |

Parts included in this kit:

3/8"-16 SS Nylon Insert Lock Nut (x2)

3/8"-16 x 1" Hex Flange Bin PE Washer (x2)

AL Mounting Arm Gasket

UPMB Bracket Assembly

UPMB Bracket Cover Assembly

ILP – Industrial Lighting Products, LLC
519 Codisco Way, Sanford, FL 32771
Phone: (407) 478 3759
Fax: (407) 478 3760
www.ilp-inc.com

WMB Installer Notes:

1) Please make sure bracket is completely secure to the wall before mounting the Area Light.

AL WMB Kit Installation
(Wall Mounting Bracket)

1

2

3

4

5