




VALUE LANCE


TROFFER RETROFIT KIT

TROFFER KIT INSTALLATION INSTRUCTIONS

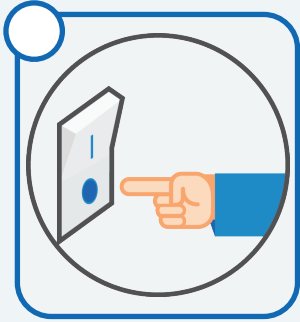


STEP 1

Shut off or disconnect power to the fixture.

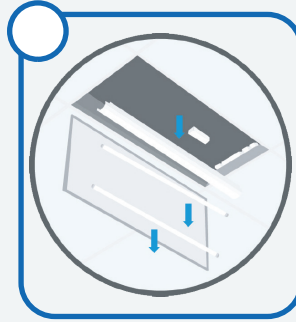


STEP 2

Remove existing fluorescent lamps and components, then disconnect existing connections to the fluorescent ballast.

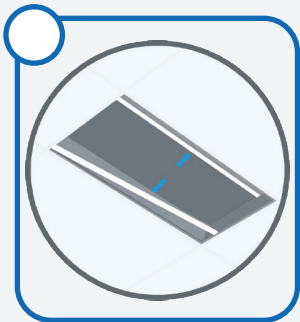


STEP 3

Gently lift the original housing and insert the brackets between the housing and the T-grid. Allow the housing to rest on the brackets, securing them in place. Optional tether included on the mounting brackets to secure the kit to the housing.

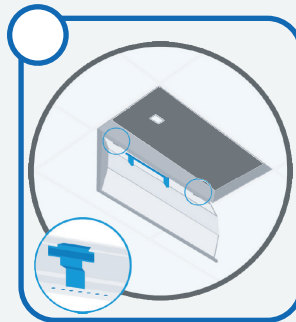


STEP 4

Hang the Value LANCE body by hooking the T-hinges into the respective slots in the bracket.

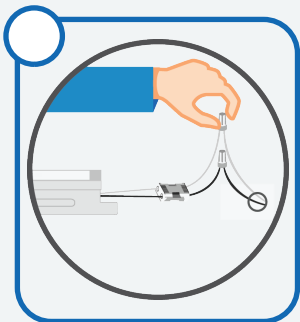

STEP 5

Connect the Value LANCE to AC power and ground.

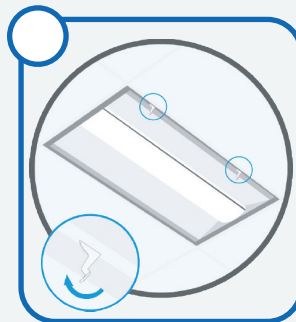

STEP 6

Rotate the Value LANCE body up into the fixture and close the latches. Turn on or reconnect power to the fixture to complete the installation.

ILP recommends a test installation prior to ordering project quantities.