




Skyline Bird Spike Installation Guide

This installation instruction applies to the Small Skyline model. (SAS)

Tools Needed

Drill with 8/32 Hex Head Nut Driver Bit

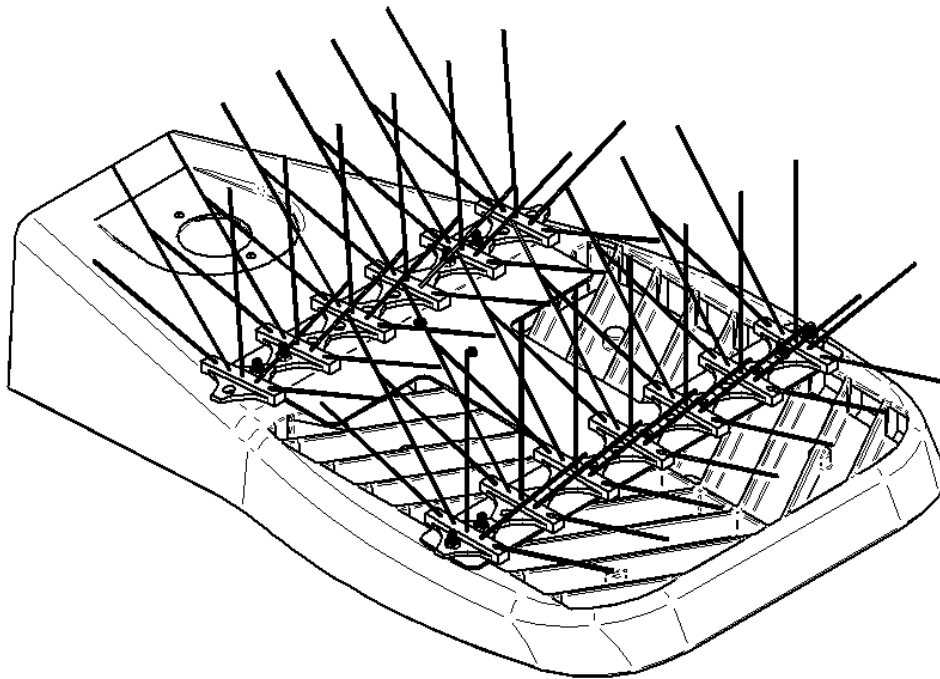

WARNING

To avoid the risk of fire, explosion, or electric shock, this product shall be installed, inspected, and maintained by a qualified electrician, in accordance with all applicable electrical codes.

WARNING

To avoid electric shock:

- Allow product to cool before servicing.
- Be certain electrical power is OFF before and during installation or maintenance.
- Luminaire must be connected to a wiring system with equipment-ground conductor.

Installation Figures

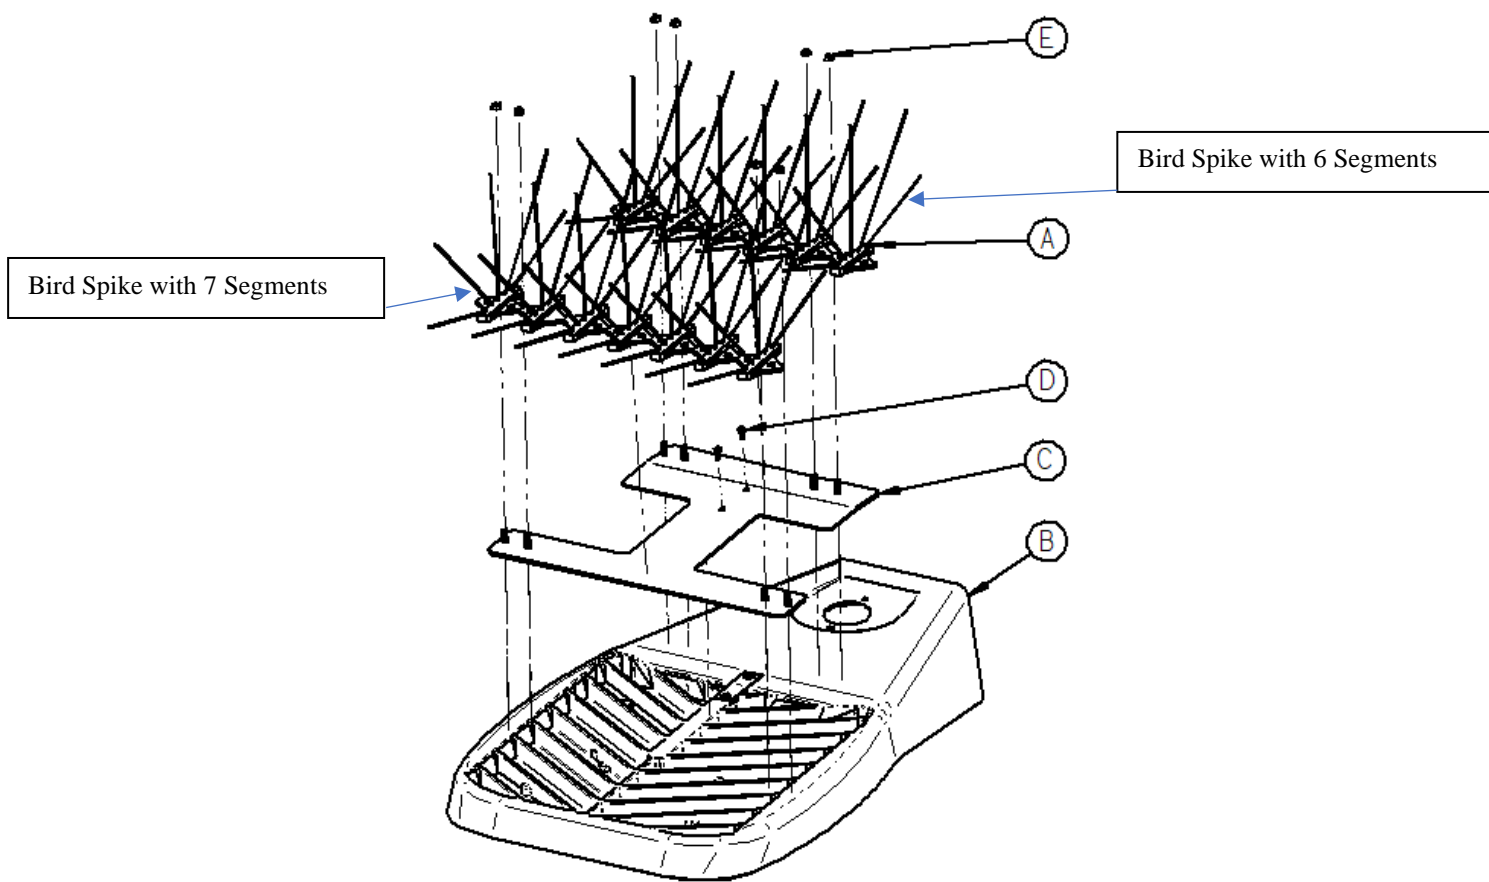


Figure 1 Bird Spike Assembly

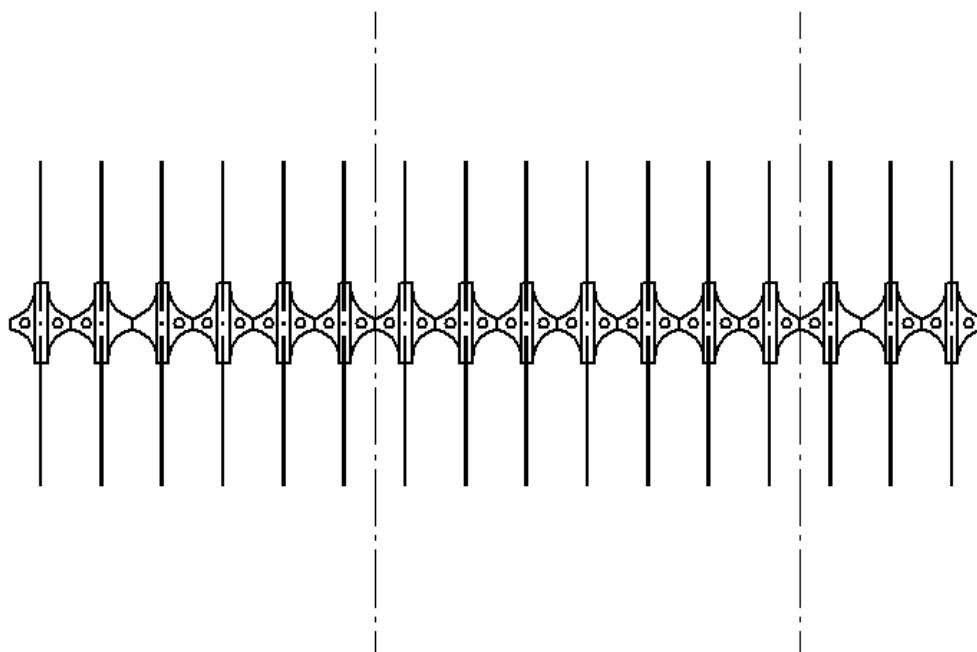


Figure 2 Bird Spike Trimming Locations

Installation Steps

1. Trim the Bird Spike (A) with hacksaw as shown in Figure 2. Please note that one section contains 6 segments, and one contains 7 segments. Discard the remaining 3 segments.
2. Remove and discard the existing two screws that are in the center of the Fixture (B). Align the Bracket (C) with the Fixture (B) such that the Screws (D) align with the existing screw holes in the Fixture (C). Use the provided Screws (D) to fasten the Bracket (C) down. Ensure that the PEMs are facing upwards as shown in Figure 1.
3. Place the Bird Spikes (A) onto the fixture, ensure that they are in the correct position. Then use the provided Locknuts (E) to fasten the Bird Spikes (A) down.
4. Inspect the fixture to make sure that both screws (D) and locknuts (E) are fully tightened, and the bird spikes Bracket (C) is rigid.